

MiniTech

User Instructions



Company

Founded in 1983 with the aim of providing a complete range of professional products, Tecnosicurezza is now a consolidated reality in the field of locks and security systems for safes.

The experience gained in over 35 years of activity in the security sector has allowed the designing and manufacturing of high technology and reliability systems, which continue to receive the approval of an increasingly demanding clientele.

TECNOSICUREZZA is present directly all over the world through its own branches and with an extensive distribution network.

TECNOSICUREZZA is aimed at national and international customers of primary importance, such as banks, safe manufacturers, cash in transit companies, mass market retailers and post offices.

Today TECNOSICUREZZA is a leading company focused on the customers' needs and constantly in step with technology.

MiniTech

Table of contents

COMPANY	2
TABLE OF CONTENTS	3
IMPORTANT NOTES!	5
GENERAL INFORMATION	6
OVERVIEW FUNCTIONS	8
LOCK OPENING	9
MANAGER (01) AND USERS (02-49):	9
OVERRIDE USERS (50-59):	9
CODE CHANGING	10
INSTALL/DISABLE/DELETE USERS	10
LOCK SETUP	10
SETUP WITH DALLAS KEY	10
SETUP WITH PC	11
OPENING WITH DYNAMIC CODES	11
BLOCK AND UNBLOCK THE LOCK	12
TEST MODE	12
KEYPAD LANGUAGE	13
AUDIT	13
EVENTS CHECK ON LCD	13
DOWNLOAD THE AUDIT ON A DALLAS KEY	13
DOWNLOAD AUDIT ON PC	14
FIRMWARE VERSION	14
CONTRAST ADJUSTMENT	14
TIME DELAY	15
SYSTEM INFO	15
DYNAMIC KEYPAD ID AND DYAMAWEB SOFTWARE LICENSE	15
MASTER MENU	16
TIME & DATE SETTINGS	16
TIME LOCK	16
WEEKLY TIME LOCK SETTINGS – ADDING NEW VALUES	16

WEEKLY TIME LOCK SETTINGS – VERIFY OR DELETE VALUES	17
CLOSING PERIODS (OFF DAYS) – ADD NEW VALUES	17
OPENING PERIODS - ADD NEW VALUES	18
OPENING PERIODS - VERIFY OR DELETE VALUES	19
AUDIT	19
DOWNLOAD THE AUDIT ON A DALLAS KEY	19
EVENTS CHECK ON LCD	19
CHANGE MASTER CODE	20
MANAGER MANAGEMENT	20
DYNAMIC CODES – ENABLING/DISABLING	20
DYNAMIC CODES ACTIVATION WITH STATIC CODES DELETING	21
LOCK RECLOSURE MODE	21
CONTACTS	24

MiniTech

Important notes!

- Before installing this product, please read carefully the installation and operating instructions.
- Locks have been designed to correctly operate in a temperature range from -5°C to +50°C and in an environment with non-condensing humidity between 25% and 90%.
- The lock must not be oiled/lubricated/greased.
- If installed in normal domestic or office environments, the locks do not require particular maintenance; in any case, after 10,000 opening/locking cycles, it is recommended to run a test that verifies the correct and complete operation of the product.
- Use only DURACELL™ 9 Volt Alkaline batteries, or battery holders with DURACELL™ 1.5 Volt Alkaline batteries. Alternatively, it is possible to use a 12VDC - 1A power adapter (p.n. N1212) with relative power supply interface (p.n. T6005/W or p.n. T6005).
- A long beep together with the message “LOW BATTERY” on the display, indicate a low battery level which need immediate replacing.
- It is strongly recommended to change the default codes before the usage and to keep safely the new codes.
- Do never use codes easy to be guessed such as 123456, birth dates or others, based on own personal information.
- After changing a code, perform several opening/closing tests before closing the door.

Should the lock label be removed, warranty is void.

General information

Using your keypad


- Press any button to power up the keypad. LCD which shows:


ENTER CODE
X X - X X X X X X

If more locks are installed, LCD shows:
Enter the lock number to select it.

SELECT LOCK

- To enter a code, power up the keypad and enter the corresponding digits.
- LCD automatically switches OFF if no buttons are pressed within 30s.

- To scroll the menu, press .

- To confirm an operation, press .

- To leave a menu or come back to the main menu, scroll the functions until "EXIT?" and press OK.



- To enter a code plus Dallas key (if set), enter the code digits and insert the Dallas key in the keypad reader.

- To enter a user provided with Dallas key only (if set), insert the Dallas key in the keypad reader. LCD shows:


DALLAS USER
XX

- To start a time delay counting (if set), enter a code. LCD shows:

TIME DELAY
00:59

- To stop a time delay counting, press  and then confirm with .

STOP DELAY
COUNTING?

After time delay counting, LCD shows open window counting:
Press  and enter a code for opening.

OPEN WINDOW
00:01

MiniTech

- If a wrong code is entered, LCD displays the message:
- If a wrong dynamic/activation code is entered, LCD displays the message:
- If a dynamic/activation code is entered more than 30 minutes before its beginning validity time, LCD shows:
- If a dynamic/activation code is entered more than 30 minutes later than its beginning validity time, LCD shows:
- To open or access the menu in dual mode (if set), enter the first code. LCD shows:
Then, enter the second code.

WRONG CODE

WRONG DYNAMIC
CODE

WRONG DYNAMIC
CODE

WRONG DYNAMIC
CODE

ENTER 2° CODE
XX – XXXXXX

Shortcuts

Press and hold for 2 seconds the button related to the needed function:



- 0** = Change Manager code (01), users (02-49) and override users (50-59)
- 1** = Users management
- 2** = Lock setup (even with Dallas key)
- 3** = PIN entering for dynamic codes (after dynamic codes activation)
- 4** = Block/release the lock
- 5** = Test mode
- 6** = Change language
- 7** = Audit and PC link (only in pre-setup mode)
- 8** = System info and contrast adjustment
- 9** = Time delay and opening window

 = Exit and back to the main menu

 = Master menu

User properties and default codes

Users can be set for opening with code only, code + Dallas key or with Dallas key only. It is also possible to set a dual mode opening: in this case, entering the two users codes is required to open the lock.

Default codes are:

Master: 1-2-3-4-5-6-7-8.

Manager: 123456.

Users from 02 to 49: 02-020202, 03-030303, and so on. They always open with time delay if set.


Override users from 50 to 59: 50-505050, 51-515151, and so on. They always open without time delay.

This user manual describes the standard programming. According such programming and unless different requests while ordering the product, an opening can be performed by entering single users codes (no dual mode) and without time delay. Thus, the user manual must be adapted according the configuration selected.

It is strongly recommended to change the default codes before using the lock.

Overview functions

Lock opening

After entering an opening code, it is possible to open the lock within 3 seconds. It's not necessary instead with motorized locks: in this case indeed, the motor moves the bolt which remains in opening position for about 8 seconds before returning in closing position. In the manual closing version instead, the bolt can be closed by pressing  key for few seconds.

Penalty

Four consecutive wrong codes initiate a four minutes penalty time. During this period, LCD shows the message "PENALTY" and no operation is allowed.

Time Delay

Programmable time delay in between 0 and 99 minutes. Programmable opening window in between 1 and 19 minutes.

MiniTech

Dallas keys

Available as option for Manager and users (not for Master).

Power supply

Lock can be powered with:

- an ALKALINE 9V battery located in the battery compartment below the keypad;
- an internal battery box provided by Tecnosicurezza (6 ALKALINE 1.5 batteries);
- A power adapter (ref. N1212) with power supply interface (ref. T6005/W or T6005) both provided by Tecnosicurezza.

Low battery warning

A long beep together with the message "LOW BATTERY" on the display, indicate a low battery level which needs immediate replacing.

Audit

The lock is able to save the last 5500 operations with time, date, user and operations description.

Silent alarm

With this function enabled, enter an opening code increasing or decreasing by one number the last code digit (ex. 03-030304 or 03-030302 instead of 03-030303): the lock opens and simultaneously the output of the alarm interface or I/O interface is activated.

IMPORTANT

Some options/characteristics reported in this user manual, can only be used if previously enabled through the setup software. Thus, please refer to the user manual IU_Minitech_setup_XX.

Please contact Tecnosicurezza for further information.

Lock opening

Manager (01) and users (02-49):

Power up the keypad and enter an opening code. LCD shows:

OPEN

Open the lock within 3 seconds.

Override users (50-59):

Power up the keypad and enter an override user code. LCD shows:


OPEN

Open the lock within 3 seconds.

Code changing

WARNING: it is recommended to always perform this operation with door open.

Manager (ID 01), users (ID 02-49) and override users (ID 50-59)

Power up the keypad. Press and hold . LCD shows:

ENTER OLD CODE
X X - X X X X X X

Enter the **old code**. LCD shows:


ENTER NEW CODE
X X X X X X

Enter the **new code**. LCD shows:

CONFIRM CODE
X X X X X X

Confirm the **new code**.

Install/Disable/Delete users

Power up the keypad. Press and hold . LCD shows:

USERS MANAGEMENT
0 1 - X X X X X X


Enter Manager code.

Press  to scroll users list or enter user ID.


02 03 04 05 06
✓ X _ _ ✓


“✓” user installed, “_” user deleted, “X” user disabled.

Override users 50 ÷ 59 can be only installed when the lock is open.


Press . If the user is not installed LCD shows:

02
INSTALL?

 Dallas key, “1 2” code, “+” dual mode, “TL” time lock

Press  to confirm or  to exit or for switching to the next user.

Enter the new user code and confirm it.

If the selected user is already installed, press  to choose whether to disable it, to delete it or for leaving and selecting another user. Press


 to confirm the choice.

Lock setup

Lock setup can be performed through a Dallas key properly programmed or through a direct PC link. In both cases, lock must be in pre-setup mode (press 1 to open it).

Setup with Dallas key




MiniTech

Power up the keypad. Press and hold . LCD shows:

SYSTEM SETUP

Insert the setup Dallas key in the reader and connect the reader with the keypad by means of the jack connector. LCD shows:

08:00 FRI
27/01/2019


Check time and date. Press  to confirm or  to update the values. Then press  again to confirm. LCD shows:

UPLOADING 10%

If the operation is successfully performed, LCD shows:

OPERATION DONE


Setup with PC

Power up the keypad. Press and hold . LCD shows:


PC LINK

Press , LCD shows:

PC LINK
...

Start the programming on the Setup software or press  to exit. If the operation is successfully performed, LCD shows the firmware version and few seconds later the keypad switches OFF.

Opening with dynamic codes

Power up the keypad and insert the Dallas dynamic key in the Dallas reader. Alternatively, press and hold  to enter the dynamic user PIN (optional). LCD shows:

DYNAMIC USER
X X X X

Enter the dynamic user PIN. LCD shows:

DYNAMIC CODE
X X X X X X X X X X

Enter the dynamic code and press .

Open the lock within 3 seconds (green led ON).

If set by the software Dyama or DyamaWeb for dynamic codes creation, LCD shows the closing code when the bolt re-closes. Please refer to the user manuals IU_Dyama_XX or IU_DyamaWeb_XX for further information.

CLOSING CODE
179

WARNING: dynamic codes must be used respecting the **sequence of activation time** in which they have been created by the software (Dyama or DyamaWeb), otherwise the last created code deletes all the previous ones (i.e. if three codes are created and the third one is used before using the first two ones, those first two codes are deleted). In this case indeed LCD shows:

DYNAMIC CODE
DELETED

Block and unblock the lock

Power up the keypad. Press and hold **4**. LCD shows:

BLOCK SYSTEM
X X – X X X X X X

Enter the requested code.

If a weekly time lock is already scheduled, LCD shows the next opening time.

BLOCK UNTIL
14/09 08:00

To set a different opening time, enter the new values (max. 31 days) and then press **OK** to confirm.

BLOCK UNTIL:
DD/MM hh:mm

LCD shows:

BLOCK THE
LOCK?

Press **OK** to confirm. LCD shows:

LOCK BLOCKED

To unblock the lock press and hold **4**. LCD shows:

UNBLOCK SYSTEM
X X – X X X X X X

Enter the requested code.

LCD shows:

OPERATION
DONE

Depending by the lock setup, you may be required to enter the Master code.

Test mode

This function allows to check the correct system operation.

Power up the keypad. Press and hold **5**. LCD shows:

TEST MODE
1234567890 → ✓

Enter the sequence of buttons shown on the LCD.

TEST MODE
1234567890 → ✓

Any working button produces a short beep.

A damaged button produces a long beep. LCD shows:

WRONG/FAULTY
KEY

Two short beeps are produced if the test terminates successfully. LCD shows:



OPERATION
DONE

MiniTech

Keypad language

Power up the keypad. Press and hold . LCD shows:

ITALIANO
1 2 3

Enter one of the numbers shown on the LCD to select a new language (the new language will be automatically changed). Press  to confirm or  to exit.

ENGLISH
1 2 3

Audit

Keypad and lock events can be checked on the LCD (only openings and closings). These events can be also stored in a Dallas key previously programmed using “DMT Audit” software.

Dallas key only allows to store the last 1200 events which can be later downloaded on PC through an USB interface provided by Tecnosicurezza.

Direct PC connection allows to download all 5500 events, using an USB interface and a specific software provided by Tecnosicurezza.

For further information, refer to the user manual IU_DMT_Audit_00_XX or contact Tecnosicurezza.

Events check on LCD


Use this function to check all opening and closing events previously recorded.



Power up the keypad. Press and hold . LCD shows:

LOCK AUDIT
0 1 – X X X X X X

Enter Manager code. LCD shows:

ENTER DALLAS

Wait for few seconds or press , LCD shows:

PC LINK 
SCROLL EVENTS 

Press , LCD shows:

SCROLL EVENTS
ON LCD

Wait for few seconds, LCD shows the last opening/closing event.

001:  WED
28/09 14:42:48

Press  to scroll all the events or  to exit.

Download the audit on a Dallas key

Power up the keypad. Press and hold . LCD shows:

LOCK AUDIT
0 1 – X X X X X X

User instructions

MiniTech

Enter Manager code. LCD shows:

```
ENTER DALLAS
...
```

Insert the Audit Dallas key into the reader. Events download begins automatically. LCD shows:

```
DOWNLOADING
32%
```

If download is successful, LCD shows:

```
OPERATION DONE
```

Use the software Tecnosicurezza DMT Audit to download the events on PC.

Download audit on PC


Events can be downloaded through a USB interface provided by Tecnosicurezza.

Power up the keypad. Press and hold **1**. LCD shows:

```
LOCK AUDIT
0 1 - X X X X X X
```

Enter Manager code. LCD shows:


```
ENTER DALLAS
...
```

Wait for few seconds or press , LCD shows:

```
PC LINK
SCROLL EVENTS
```

Press , LCD shows:

```
PC LINK
...
```


Start the download using the software DMT Audit or press  to exit.

If the static codes have been deleted, PC connection can be enabled by using the dynamic user AUDIT.

Firmware version

Power up the keypad. Press and hold **8**. LCD shows:

```
MiniTech    v 1.00
                21/02/12
```

Press  to come back to the main menu.

Contrast adjustment

This option is also available after the activation of dynamic codes.

For further information see **Dynamic codes – Enabling/Disabling**, page 20.



Power up the keypad. Press and hold **8**. LCD shows:

```
MiniTech    v 1.00
                21/02/12
```


Press and hold again **8**. LCD shows:

```
ADJUST CONTRAST
1 2 3 4 5 6 7 8
```

MiniTech

Enter a value 1÷8 to select a different contrast level which will be quickly applied. Press  to confirm or  to exit.

Time delay

Power up the keypad. Press and hold . LCD shows:

```
SET TIME DELAY
01 - X X X X X X
```

Enter Manager code. LCD shows the current values for time delay and open window.

```
TIME DELAY 00
OPEN WINDOW 01
```

Press  to exit or  to set new values.

```
TIME DELAY mm
OPEN WINDOW mm
```


Enter the new values and press  to confirm. LCD shows:

```
VALUES UPDATED
```

Time delay can be set in between 0 and 99 minutes, the open window in between 1 and 19 minutes instead.

To set a time delay shorter than the one currently present, lock must be open.

System Info

Power up the keypad. Press and hold . LCD shows the keypad firmware version:


```
MiniTech v 1.00
21/02/12
```

Press and hold  to see lock info.


Dynamic keypad ID and DyamaWeb software license

The following information is available after the activation of dynamic codes. For further information see **Dynamic codes – Enabling/Disabling**, page 20.

Power up the LCD. Press and hold  until LCD displays the keypad firmware version.

Press : LCD displays the ID of the keypad in which dynamic codes have been activated. This ID corresponds to the number associated by DyamaWeb software during the keypad creating in the database.

```
OTC ID
XXXXXXXX
```


Press  a second time: LCD displays the license number of DyamaWeb software version that manages the dynamic codes of the keypad and related locks.

```
DYAMAWEB
XXXXXX
```

Press  a third time: LCD displays the current date and time.

Press  a further time to exit.

Master menu

Power up the keypad. Press and hold . LCD shows:


MASTER MENU
X X X X X X X X

Enter Master code (default value 1-2-3-4-5-6-7-8).


Time & date settings

Power up the keypad and enter the Master menu. LCD shows:


TIME AND DATE
SETTINGS

Press . LCD shows the current time and date.

08:00 FRI
27/01/2006

Press  to change time and date.


hh:mm _ _ _ _
GG / MM / YYYY

Enter the new time and date values and press  to confirm.

Time Lock


WARNING:

It is recommended to enter this menu always with the door open;
Master menu, allows to add/delete the settings for time lock/closing periods/opening periods, only if current time and date values are included in an opening period.

Enter the Master menu. Press  until LCD shows:

TIME LOCK
SETTING


Weekly time lock settings – Adding new values



Enter Time Lock menu and press . LCD shows:

WEEKLY TIME LOCK
SETTING




Press . LCD shows:

ADD NEW VALUES


Press . LCD shows the current day of the week.

 hh:mm FRI
 hh:mm

The first one is an opening time while the second one is a closing time.
Enter the new values.


Press  to confirm. LCD shows the next day of the week, proposing the same time values. Press  to confirm or  to select another day without entering new time values or else enter the new time values as previously illustrated.

At the end of the week, LCD shows:

END OF LIST
EXIT AND SAVE? 

Press  to save or  for coming back to the first week day.


MiniTech

All values entered can be saved only by pressing .

Inside Time Lock menu, opening time intervals are indicated: it means the safe can be opened by entering a valid code, but only inside the time interval itself (ex. opening time interval from 08.00 to 14.00 from Monday to Friday: the safe can be only opened from 08.00 to 14.00 and only in those days, it cannot be opened before 08.00 and after 14.00. Moreover, safe cannot be opened on Saturdays and Sundays).


It is possible to schedule up to 4 time intervals per day (ex. Monday from 07.00 to 10.00, from 12.00 to 13.00, 15.00 to 16.00 and 18.00 to 19.00).


Weekly time lock settings – Verify or delete values

Enter Time Lock menu and press . LCD shows:

Press . LCD shows:


Press . LCD shows:

Press . LCD shows the values for the first day.

Press  to scroll all the schedules list.

Press  on a schedule. LCD shows:



Press  to confirm or  to exit.

At the end of the list, press . LCD shows:

WEEKLY TIME LOCK
SETTING

ADD NEW VALUES

VERIFY OR DELETE
VALUES

 hh:mm FRI
 hh:mm

DELETE VALUES? 


END OF LIST
EXIT?

Closing periods (OFF days) – Add new values

Closing periods are time intervals in which is possible to close the lock even when a time lock is enabled.

It is possible to schedule up to 60 closing periods (they can be opening or closing periods). Each one of them has a maximum time length of 14 days.

WARNING: during closing periods, the safe cannot be opened.

Enter Time Lock menu and press . LCD shows:

Press . LCD shows:

Press . LCD shows:

Press . LCD shows:


WEEKLY TIME LOCK
SETTING

CLOSING PERIODS
SETTING


ADD NEW VALUES

 GG/MM/AA hh:mm
 GG/MM/AA hh:mm

The first one is an closing time while second one is an opening time.

Enter the time of start and the ending time for the closing period, then press  to confirm.


Should the year be set, the closing period is not repeated.

Should not the year be set (press ) , the closing period is yearly repeated instead.


Press  to delete all values entered.

Repeat the steps above for each closing period.

Closing periods (OFF days) – Verify or delete values

Enter Time Lock menu and press . LCD shows:

WEEKLY TIME LOCK
SETTING

Press  until the LCD shows:

CLOSING PERIODS
SETTINGS

Press . LCD shows:


ADD NEW VALUES


Press . LCD shows:

VERIFY OR DELETE
VALUES

Press  to check the first closing period scheduled.


 GG/MM/AAhh:mm
 GG/MM/AA hh:mm

Press  to scroll all the scheduled closing periods.

Press  to delete the scheduled closing periods.

DELETE VALUES? 

press  to confirm or  to exit.


At the end of the list, press .

END OF LIST
EXIT?


Opening periods - Add new values

Opening periods are time intervals in which is possible to open the lock even when a time lock is enabled.

It is possible to schedule up to 60 opening periods. Each one of them has a maximum time length of 14 days.

Enter Time Lock menu and press . LCD shows:

WEEKLY TIME LOCK
SETTING

Press  until the LCD shows:

OPENING PERIODS
SETTINGS

Press . LCD shows:


ADD NEW VALUES

Press . LCD shows:


 GG/MM/AA hh:mm
 GG/MM/AA hh:mm


The first one is an opening time while the second one is a closing time.

MiniTech


Enter a date and time for opening and closing, then press  to confirm.


Should the year be set, the opening period is not repeated.

Should not the year be set (press ) , the opening period is yearly repeated instead.

Press  to delete the values entered.


Opening periods - Verify or delete values


Enter Time Lock menu and press . LCD shows:

Press  until the LCD shows:

Press . LCD shows:


Press . LCD shows:

Press . LCD shows the first opening period.

Press  to scroll all the scheduled opening periods.

Press  to delete. LCD shows:

Press  to confirm or  to exit.

At the end of the list, press .

WEEKLY TIME LOCK
SETTING

OPENING PERIODS
SETTINGS

ADD NEW VALUES

VERIFY OR DELETE
VALUES

🔒 GG/MM/AA hh:mm
🕒 GG/MM/AA hh:mm


DELETE VALUES?
✓

END OF LIST
EXIT?

Audit

Download the audit on a Dallas key

Events can be downloaded through a Dallas key.

Power up the keypad and enter Master menu. Press  until the LCD shows:

Insert the Audit Dallas key into the reader.

Press . LCD shows:

If download is successful, LCD shows:

SYSTEM AUDIT

ENTER DALLAS
...

DOWNLOADING
10%


OPERATION DONE


Events check on LCD


This function allows to check all openings and closings performed on LCD.

Enter Master menu. Press  until the LCD shows:

SYSTEM AUDIT

Press  and wait for few seconds. LCD shows:


PC LINK 
SCROLL EVENTS 

Press . After few seconds, LCD shows the last opening/closing event recorded.

001:  WED
28/09 14:42:48

Press  to scroll all the events or  to exit.

Change Master code

Power up the keypad and enter Master menu. Press  until the LCD shows:

CHANGE MASTER
CODE


Press  and enter the new code.

ENTER NEW CODE
X X X X X X X X

Enter the new code again to confirm it.

CONFIRM CODE
X X X X X X X X

Manager Management


Power up the keypad and enter Master menu. Press  until the LCD shows:

MANAGER
MANAGEMENT


Press . LCD shows:

MANAGER 



“V” installed, “_” deleted, “X” disabled.

Press . If the Manager is not installed, LCD shows:

01
INSTALL?


Press  to confirm. Then enter the new Manager code and confirm it. LCD shows:

OPERATION DONE

If the Manager is already installed, press  for disabling/deleting/installing. Then press  to confirm.

Dynamic codes – Enabling/Disabling

WARNING: it is recommended to always enable/disable the dynamic codes with the door open. Later, dynamic codes can be activated through the red Dallas key 1971 previously programmed with the software Dyama or DyamaWeb.

Power up the keypad and enter Master menu. Press  until the LCD shows:

DYNAMIC CODES

Press . LCD shows:

DYNAMIC CODES
ENABLED/DISABLED

Press . The LCD shows:

DYNAMIC CODES
ENABLE/DISABLE?

MiniTech

Press  to confirm. LCD shows:


OPERATION DONE

Dynamic codes activation with static codes deleting

WARNING: with this operation, it is possible to delete the static codes for all users and Manager. Moreover, in dependig on the configuration selected, Master static code may be deleted as well.

Insert the red Dallas key N1971 in the reader. LCD shows:

DYNAMIC CODE
XXX XXX XXX

Enter the activation code generated by the software software Dyama or DyamaWeb and press . LCD shows:

DELETE ALL THE
STATIC CODES?

Press . LCD shows:

OPERATION IN
PROGRESS...


Once terminated, LCD shows:

DYNAMIC CODES
ACTIVE

To re-install the static codes (only for Master and Manager), use the dynamic user REMOVAL. Later, it is possible to re-install all the other users from the menu *Users management*.

Lock reclosure mode

WARNING: This option is only available for motorized locks. To enable it, lock must be opened.

Power up the keypad and enter Master menu. Press  until the LCD shows:


LOCK RECLOSURE
MODE

Press . LCD shows:

MODE:
AUTOMATIC

Press  to select between *AUTOMATIC* and *MANUAL* mode.

Press  to confirm.

With *MANUAL*, lock can be closed by pressing and holding  for 2 seconds.

With *AUTOMATIC* instead, lock automatically re-closes after the time set with MiniTech Setup.

**Correct disposal of this product:
(Waste Electrical & Electronic Equipment)**

Applicable in the European Union and other European countries with separate collection systems.



This marking displayed on the product or its literature indicates that it should not be disposed with other wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Contacts

GLOBAL HEADQUARTERS

Tecnosicurezza SpA

Via Cesare Battisti, 276
37057 San Giovanni Lupatoto
Verona

Tel.+39 045 826 64 70

Fax. +39 045 826 64 69

info@tecnosicurezza.it

USA HEADQUARTERS

Tecnosicurezza Inc.

50, Thomas Lane
Versailles, KY 40383

Tel.+1 859 490 89 30

info@usatecno.com

SPAIN HEADQUARTERS

Tecnosicurezza Sa

C/Menor, 4 - Nave 10
Pol. Ind La Mina 28770
Colmenar Viejo

Tel.+34 91 804 33 91

Fax.+34 91 804 32 63

info@tecnosicurezza.es