

TechMaster

User Instructions



Company

Founded in 1983 with the aim of providing a complete range of professional products, Tecnosicurezza is now a consolidated reality in the field of locks and security systems for safes.

The experience gained in over 35 years of activity in the security sector has allowed the designing and manufacturing of high technology and reliability systems, which continue to receive the approval of an increasingly demanding clientele.

TECNOSICUREZZA is present throughout Europe, Asia, North and South America markets and, through an extensive distribution network.

TECNOSICUREZZA is aimed at national and international customers of primary importance, such as banks, safe manufacturers, cash in transit companies, mass market retailers and post offices.

Today TECNOSICUREZZA is a leading company focused on the customers' needs and is constantly in step with technology.

TechMaster

Table of contents

COMPANY	2
TABLE OF CONTENTS	3
IMPORTANT NOTES!	5
GENERAL INFORMATION	6
OVERVIEW FUNCTIONS	9
OPENING THE LOCKS	10
USERS (OR OVERRIDE USERS): OPENING WITHOUT TIME DELAY	10
USERS: OPENING WITH TIME DELAY	10
MANAGER (OR OVERRIDE MANAGER): OPENING WITHOUT TIME DELAY	10
MANAGER (OR OVERRIDE MANAGER): OPENING WITH TIME DELAY	10
OPENING WITH DYNAMIC CODES (DALLAS KEY OPTION)	11
OPENING WITH DYNAMIC CODES (PIN OPTION)	11
DUAL MODE OPENING WITHOUT TIME DELAY	12
DUAL MODE OPENING WITH TIME DELAY	12
MASTER MENU	12
TIME & DATE SETTINGS	12
TIME AND DATE RECOVERY THROUGH DYAMAWEB (OTC SOFTWARE)	13
TIME LOCK SETTINGS	13
WEEKLY TIME LOCK SETTINGS – ADDING NEW VALUES	14
WEEKLY TIME LOCK SETTINGS – VERIFY OR DELETE VALUES	14
CLOSING PERIODS (HOLIDAYS) – ADD NEW VALUES	15
OPENING PERIODS - ADD NEW VALUES	16
OPENING PERIODS - VERIFY OR DELETE VALUES	16
PC CONNECTION	17
MANAGER MANAGEMENT	17
DYNAMIC CODES – ENABLING/DISABLING	17
DYNAMIC CODES ACTIVATION WITH STATIC CODES DELETING	18
MANAGER MENU	18
USERS MANAGEMENT	18
TIME DELAY	19
VARIABLE TIME DELAY – ADDING NEW VALUES	19
VARIABLE TIME DELAY – VERIFY OR DELETE VALUES	20
PC CONNECTION	20
OVERRIDE MANAGER MENU	20
OVERRIDE USERS MANAGEMENT	20
CODE CHANGING	21
CHANGE CODE FOR STANDARD AND OVERRIDE USERS	21
CHANGE CODE FOR MANAGER	21

CHANGE CODE FOR OVERRIDE MANAGER	22
CHANGE CODE FOR MASTER	22
TIME MENU	22
OPENING EXTENSION	22
IMMEDIATE TIME LOCK	23
CONFIGURATION MENU	23
INSTALL LOCKS	23
REMOVE LOCKS	24
LOCK RECLOSURE MODE	24
INSTALL I/O INTERFACE	25
CONFIGURE I/O INTERFACE	25
REMOVE I/O INTERFACE	25
DISPLAY CONTRAST	26
KEYPAD LANGUAGE	26
MEMBRANE TEST	26
SYSTEM INFO	27
DYNAMIC KEYPAD ID AND DYAMAWEB SOFTWARE LICENSE	27
CORRECT DISPOSAL OF THIS PRODUCT:	28
(WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)	28
CONTACTS	28

TechMaster

Important notes!

- Before installing this product, please carefully read the installation and operating instructions.
- Locks have been designed to correctly operate in a temperature range from -5°C (23°F) to + 50°C (122°F) and in an environment with non-condensing humidity between 25% and 90%.
- The lock must not be oiled/lubricated/greased.
- If installed in normal domestic or office environments, the locks do not require maintenance; in any case, after 10,000 opening/locking cycles, it is recommended to conduct a test that verifies the correct and complete operation of the product.
- Use only DURACELL™ 9 Volt Alkaline batteries, or battery holders with DURACELL™ 1.5 Volt Alkaline batteries. Alternatively, it is possible to use a 12VDC - 1A power adapter (p.n. N1212) with relative power supply interface (p.n. T6005/W or p.n. T6005).
- A long beep together with the message “LOW BATTERY” on the display, indicate a low battery level which needs to be immediately replaced.
- It is strongly recommended to change the default codes before use and to keep safely the new codes.
- Never use codes that can be easily guessed such as 123456, birth dates or based on other personal information.
- After changing a code, perform several opening/closing tests before closing the door.

Should the lock label be removed, warranty is void.

General information

Using your keypad


- Press any button to power up the keypad. LCD which displays:


ENTER CODE
X X – X X X X X X

If more locks are installed, LCD displays:
Enter the lock number to select it.

SELECT LOCK

- To enter a code, power up the LCD and enter the corresponding digits.
- LCD automatically switches OFF if no buttons are pressed within 30s.

- To scroll the menu, press .

- To confirm an operation or enter a menu press .

- To leave a menu and come back to the main menu, scroll the functions until "EXIT?" and press OK.



- To enter a code plus Dallas key (if programmed), enter the code digits and insert the Dallas key in the keypad reader.

- To enter a user provided with Dallas key only (if programmed), insert the Dallas key in the keypad reader. LCD displays:


DALLAS USER
XX

- To start a time delay counting (if programmed), enter a code. LCD displays:

TIME DELAY
00:59

- To stop a time delay counting (if programmed), press  and then confirm with .

STOP DELAY
COUNTING?

After time delay counting, LCD displays open window counting:
Press  and enter a code for opening.

OPEN WINDOW
00:01

- If a wrong code is entered, LCD displays the message:

WRONG CODE

- If a wrong dynamic/activation code is entered, LCD displays the message:

WRONG DYNAMIC
CODE

TechMaster

- If a dynamic/activation code is entered more than 30 minutes before its beginning validity time, LCD displays:
- If a dynamic/activation code is entered more than 30 minutes later than its beginning validity time, LCD displays:
- To open or access the menu in dual mode (if programmed), enter the first code. LCD displays:
Then, enter the second code.

WRONG DYNAMIC
CODE

WRONG DYNAMIC
CODE

ENTER 2° CODE
X X - X X X X X X

Shortcuts

Press and hold for 2 seconds the button related to the needed function:



- 0** = Change Manager code (01), users, override users, Master and Manager ovr (if configured)
- 1** = PIN entering for dynamic codes (after dynamic codes activation)
- 5** = Test mode
- 6** = access to Manager menu, Manager ovr menu (if configured) Change code menu, Time menu, Configuration menu and Master menu.
- 8** = System info and time and date info
- = Exit and back to the main menu
- OK** = Master menu

User properties and default codes

Users can be programmed for opening with code only, code + Dallas key or with Dallas key only. It is also possible to set a dual mode opening: in this case, entering the two users codes is required to open the lock.

Default codes are:

Master: 1-2-3-4-5-6-7-8.

Manager: 123456.

Users from 02 to 90: 02-020202, 03-030303, and so on. They always open with time delay if programmed.

Override users: through to the setup software, it is possible to configure users in between 10 and 90 (10-101010, 11-111111, and so on) as override users. They always open without time delay.

The table below reports the functions for the main users.

Master

- Access to Master Menu
- Set time and date
- Set Time Lock periods
- Audit download
- Manager Management
- Enable/disable OTCs
- Change code
- PC Link

Override manager

- Access to Ovr. Manager menu
- Override users management
- Code changing

Override users

- Opening
- Change code

Manager

- Access to Manager Menu
- Standard users management
- Override users management
- Set time delay
- Set variable time delay
- PC Link
- Audit download
- Opening
- Code changing
- Set opening extension
- Set immediate time lock

Configuration menu

- Install/remove locks
- Set display contrast
- Change language
- Test mode
- Check system Information

Standard users

- Opening
- Set opening extension, if enabled
- Set immediate time lock, if enabled
- Code changing


This user manual describes the standard programming. According to such programming and unless different requests made while ordering the product, an opening can be performed by entering single users codes (no dual mode) and without time delay. Thus, the user manual must be adapted according the configuration selected.

It is strongly recommended to change the default codes before using the lock.

TechMaster

Overview functions

Lock opening

After entering an opening code, it is possible to open the lock within 3 seconds. It's no necessary instead with motorized locks: in this case indeed, the motor moves the bolt which remains in opening position for about 8 seconds before returning in closing position. In the manual closing version instead, the bolt can be closed by pressing  key for few seconds.

Penalty

Four consecutive wrong codes initiate a four-minutes penalty time. During this period, LCD displays the message "PENALTY" and no operation is allowed.

Time Delay

Programmable time delay in between 0 and 99 minutes. Programmable opening window in between 1 and 19 minutes.

Dallas keys

It can be programmed for any lock. Available as option for Manager and users (not for Master). TechMaster keypad only works with Dallas keys created by TECNOSICUREZZA. Upon express request, the keypad can be set in order to work also with different Dallas key models.

Power supply

Lock can be powered with:

- an ALKALINE 9V battery located in the battery compartment below the keypad;
- an internal battery box provided by Tecnosicurezza (6 ALKALINE 1.5 batteries);
- A power adapter (ref. N1212) with power supply interface (ref. T6005/W or T6005) both provided by Tecnosicurezza.

Low battery warning

A long beep together with the message "LOW BATTERY" on the display, indicates a low battery level which should be immediately replaced.

Silent alarm

With this function enabled, enter an opening code increasing or decreasing by one number the last code digit (ex. 03-030304 or 03-030302 instead of 03-030303): the lock opens and simultaneously the output of the alarm interface or I/O interface is activated.

Audit

The lock saves the last 6000 operations with time, date, user and operations description. The keypad can save the last 250 operations. It is possible to download the events for locks and keypad by using the Tecnosicurezza DMT Audit software. For further information refer to the IU_DMT_Audit_XX.

IMPORTANT

Some options/characteristics reported in this user manual, can only be used if previously programmed through the setup software. Therefore, please refer to the user manual IU_TechMaster_setup_XX. Please contact Tecnosicurezza for further information.

Opening the locks

Users (or Override users): opening without time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed. LCD displays:

OPEN

Open the lock within 3 seconds.

Users: opening with time delay


Power up the keypad. Enter an opening code and insert the Dallas key, if programmed.

TIME DELAY
00:59

LCD displays the time delay counting:

At time elapsed, the LCD displays the open window counting time.

OPEN WINDOW
00:01

Press , LCD displays:


ENTER CODE
X X - X X X X X X

Enter an opening code and insert the Dallas key, if programmed. LCD displays:

OPEN

Open the lock within 3 seconds.

Manager (or Override Manager): opening without time delay

Power up the keypad. Press  for opening with Manager code or press it two times for opening with Manager Ovr code. LCD displays:

MANAGER CODE
X X X X X X

Enter Manager code and insert the Dallas key, if programmed (or enter Manager Ovr code and insert the Dallas key, if programmed). LCD displays:

OPEN

Open the lock within 3 seconds.

Manager (or Override Manager): opening with time delay

Power up the keypad. Press  for opening with Manager code or press it two times for opening with Manager Ovr Code. LCD displays:

MANAGER CODE
X X X X X X


Enter Manager code and insert the Dallas key, if programmed (or enter Manager Ovr Code and insert the Dallas key, if programmed). LCD displays the time delay counting:

TIME DELAY
00:59


Once the time delay has elapsed, the LCD displays the open window counting time.

OPEN WINDOW
00:01

TechMaster

Press , LCD displays:

ENTER CODE
X X - X X X X X X

Press  for opening with Manager code or press it two times for opening with Manager Ovr code. LCD displays:

MANAGER
X X X X X X

Enter Manager code/Manager Ovr code and insert the Dallas key, if programmed. LCD displays:


OPEN

Open the lock within 3 seconds.

Opening with dynamic codes (Dallas key option)

Power up the keypad. Insert the Dallas dynamic key in the Dallas reader. LCD displays:

DYNAMIC CODE
X X X X X X X X

Enter the dynamic code and press . LCD displays:

OPEN

Open the lock within 3 seconds.

If programmed by the software Dyama or DyamaWeb for dynamic codes creation, LCD displays the closing code when the bolt re-closes. Please refer to the user manuals IU_Dyama_XX or IU_DyamaWeb_XX for further information.

CLOSING CODE
179

WARNING: dynamic codes must be used respecting the **sequence of activation time** in which they have been created by the software (Dyama or DyamaWeb), otherwise the last created code deletes all the previous ones (i.e. if three codes are created and the third one is used before using the first two ones, those first two codes are deleted). In this case indeed LCD displays:

DYNAMIC CODE
DELETED

Opening with dynamic codes (PIN option)

Power up the keypad. Press and hold  to enter the dynamic user PIN (optional). LCD displays:

DYNAMIC USER
X X X X

Enter the dynamic user PIN. LCD displays:

DYNAMIC CODE
X X X X X X X X

Enter the dynamic code and press . LCD displays:

OPEN

Open the lock within 3 seconds.

If programmed by the software Dyama or DyamaWeb for dynamic codes creation, LCD displays the closing code when the bolt re-closes. Please refer to the user manuals IU_Dyama_XX or IU_DyamaWeb_XX for further information.

CLOSING CODE
179

WARNING: dynamic codes must be used within the **activation time** created by the software (Dyama or DyamaWeb), otherwise the last

DYNAMIC CODE
DELETED

created code deletes all the previous ones (i.e. if three codes are created and the third one is used before using the first two ones, those first two codes are deleted). In this case indeed LCD displays:

Dual mode opening without time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed. LCD displays:

2° USER CODE
X X - X X X X X X

Enter the second opening code and insert the Dallas key, if programmed.

OPEN

LCD displays:

Open the lock within 3 seconds.

Dual mode opening with time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed.

TIME DELAY
00:59

LCD displays the time delay counting:

When the time delay has elapsed, the LCD displays the open window counting time.

OPEN WINDOW
00:01

Press , LCD displays:

ENTER CODE
X X - X X X X X X

Enter an opening code and insert the Dallas key, if programmed. LCD displays:

2° USER CODE
X X - X X X X X X


Enter the second opening code and insert the Dallas key, if programmed.

OPEN

LCD displays:

Open the lock within 3 seconds.


Master menu

Power up the keypad. Press and hold . LCD displays:


MASTER MENU
X X X X X X X X

Enter Master code (default value 1-2-3-4-5-6-7-8).


Time & date settings

Enter the Master menu. Press  until LCD displays:


TIME AND me
SETTINGS

Press . LCD displays the current time and date.

08:00 FRI
27/01/2006

Press  to change time and date.


hh:mm ____
GG / MM / YYYY

Enter the new time and date values and press  to confirm.

TechMaster

Time and Date recovery through DyamaWeb (OTC software)

This option can only be performed after activating the dynamic codes and the deletion of all static codes (including the Master code). For further information, see the paragraph **Dynamic codes activation with static codes deleting**, pg. 18. This option allows for the updating of the time and date values by using the keypad along with the DyamaWeb software. (for further information, see user manual IU_DyamaWeb_XX or IU_DyamaWebLite_XX).

Power up the keypad and press and hold  until the keypad firmware version is displayed.

Press  until the LCD displays the current time and date.

08:00 FRI
01/27/2006

Press and hold . LCD displays:

TIME/DATE ERROR
MODE ACTIVATED!

Insert the blue Dallas key N1971 in the reader. LCD displays:



TIME/DATE ERROR
XXXX XXXX

Enter the 8-digits code displayed on the LCD into DyamaWeb software, to generate the dynamic code to access the Time & Date menu, to update time and date values.

Press . LCD displays:


DYNAMIC CODE
XXX XXX XXX

Enter the dynamic code generated by DyamaWeb software: LCD displays the current values for time and date.

Press  to enter the new time and date values and press  to confirm.

DST Settings

WARNING: it is recommended to enter this menu always with the door open.

Power up the keypad. Enter the Master menu. Press  until LCD displays:

AUTOMATIC DST

Press  one time and then press  to select between *ON* and *OFF*.

Press  again to confirm.


If the static codes have been deleted, automatic DST can be enabled by using the dynamic user DST.

Time Lock settings

WARNING:


It is recommended to enter this menu always with the door open;

Master menu, allows to add/delete the settings for time lock/closing periods/opening periods, only if current time and date values are included in an opening period.



Power up the keypad. Enter the Master menu. Press  until LCD displays:

TIME LOCK
SETTING

Weekly time lock settings – Adding new values


Enter Time Lock menu and press . LCD displays:



WEEKLY TIME LOCK
T1 SETTING

Press  once or two times to set a weekly time lock T2 or T3. Then, press .




Press . LCD displays:

ADD NEW VALUES

Press . LCD displays the current day of the week.

 hh:mm FRI
 hh:mm


The first entry is an opening time while the second entry is a closing time. Enter the new values.

Press  to confirm. LCD displays the next day of the week, proposing the same time values. Press  to confirm or  to select another day without entering new time values or else enter the new time values as previously illustrated.

At the end of the week, LCD displays:

END OF LIST
EXIT AND SAVE? ✓


Press  to save or  for coming back to the first weekday.

All values entered can be saved only by pressing .

Inside the Time Lock menu, opening time intervals are indicated: it means the safe can be opened by entering a valid code, but only inside the time interval itself (ex. opening time interval from 08.00 to 14.00 from Monday to Friday: the safe can be only opened from 08.00 to 14.00 and only in those days, it cannot be opened before 08.00 and after 14.00. Furthermore, safe cannot be opened on Saturdays and Sundays).

It is possible to schedule up to four times intervals per day (ex. Monday from 07.00 to 10.00, from 12.00 to 13.00, 15.00 to 16.00 and 18.00 to 19.00).

Weekly time lock settings – Verify or delete values

Enter Time Lock menu and press . LCD displays:


WEEKLY TIME LOCK
T1 SETTING



Press . LCD displays:

ADD NEW VALUES


Press . LCD displays:


VERIFY OR DELETE
VALUES

Press . LCD displays the values for the first day.


 hh:mm FRI
 hh:mm

TechMaster

Press  to scroll all the schedules list.

Press  on a schedule. LCD displays:

Press  to confirm or  to exit.

At the end of the list, press . LCD displays:

DELETE VALUES?




END OF LIST
EXIT?

Closing periods (Holidays) – Add new values

Closing periods are time intervals in which is possible to close the lock even when a time lock is enabled.

It is possible to schedule up to 60 closing periods (they can be opening or closing periods). Each period has a maximum time length of 14 days.

WARNING: during closing periods, the safe cannot be opened.


Enter Time Lock menu and press  until LCD displays:

Press . LCD displays:


Press . LCD displays:


Press . LCD displays:

The first entry is a closing time while second entry is an opening time.

Enter the time of start and the ending time for the closing period, then press  to confirm.


Should the year be programmed, the closing period is not repeated.


Should not the year be programmed (press ) , the closing period is yearly repeated instead.

Press  to delete all values entered.

Repeat the steps above for each closing period.

Closing periods (OFF days) – Verify or delete values

Enter Time Lock menu and press . LCD displays:

Press  until the LCD displays:

Press . LCD displays:

Press . LCD displays:

Press  to check the first closing period scheduled.

WEEKLY TIME LOCK
T1 SETTING

CLOSING PERIODS
SETTING

ADD NEW VALUES

🔒 GG/MM/AA hh:mm
🔓 GG/MM/AA hh:mm


WEEKLY TIME LOCK
T1 SETTING


CLOSING PERIODS
SETTINGS

ADD NEW VALUES


VERIFY OR DELETE
VALUES

🔒 GG/MM/AA hh:mm
🔓 GG/MM/AA hh:mm

Press  to scroll all the scheduled closing periods.

Press  to delete the scheduled closing periods.

Press  to confirm or  to exit.

At the end of the list, press .

DELETE VALUES?





END OF LIST
EXIT?

Opening periods - Add new values

Opening periods are time intervals in which is possible to open the lock even when a time lock is enabled.

It is possible to schedule up to 60 closing periods (they can be opening or closing periods). Each period has a maximum time length of 14 days.


Enter Time Lock menu and press . LCD displays:

Press  until the LCD displays:


Press . LCD displays:


Press . LCD displays:

The first entry is an opening time while the second entry is a closing time.


Enter a date and time for opening and closing, then press  to confirm.


Should the year be programmed, the opening period is not repeated.

Should not the year be programmed (press ) , the opening period is yearly repeated instead.

Press  to delete the values entered.


Opening periods - Verify or delete values

Enter Time Lock menu and press . LCD displays:

Press  until the LCD displays:

Press . LCD displays:

Press . LCD displays:

Press . LCD displays the first opening period.

WEEKLY TIME LOCK
T1 SETTING

OPENING PERIODS
SETTINGS

ADD NEW VALUES

GG/MM/AA hh:mm
GG/MM/AA hh:mm

WEEKLY TIME LOCK
T1 SETTING


OPENING PERIODS
SETTINGS

ADD NEW VALUES

VERIFY OR DELETE
VALUES


GG/MM/AA hh:mm
GG/MM/AA hh:mm

TechMaster

Press  to scroll all the scheduled opening periods.

Press  to delete. LCD displays:

Press  to confirm or  to exit.

At the end of the list, press .


DELETE VALUES?





END OF LIST
EXIT?

PC connection

Use this function to enable the connection between the keypad and PC.

Power up the keypad. Enter the Master menu. Press  until LCD displays:

Press  to start the connection with PC.


Press  to stop the connection with PC.

If the static codes have been deleted, PC connection can be enabled by using the dynamic user AUDIT.

PC LINK


PC LINK
...


Manager Management



Power up the keypad. Enter Master menu. Press  until the LCD displays:

Press . LCD displays:

“✓” installed, “_” deleted, “X” disabled.

Select Manager by entering its reference number and press .
If the Manager is not installed, LCD displays:

Press  to confirm. Then enter the new Manager code and confirm it. LCD displays:

If the Manager is already installed, press  for disabling/deleting/installing it. Then press  to confirm.

Dynamic codes – Enabling/Disabling

WARNING: it is recommended to always perform this operation with door open, to enable/disable the dynamic codes. Later, dynamic codes can be activated through the red Dallas key 1971 previously programmed with the software Dyama or DyamaWeb.

MANAGER
MANAGEMENT


1 MANAGER ✓
2 AMMINISTRAT. ✓

01
INSTALL?

OPERATION DONE

User instructions


TechMaster

Power up the keypad. Enter Master menu. Press  until the LCD displays:

DYNAMIC CODES

Press . LCD displays:

DYNAMIC CODES
ENABLED/DISABLED

Press . The LCD displays:

DYNAMIC CODES
ENABLE/DISABLE?

Press  to confirm. LCD displays:


OPERATION DONE

Dynamic codes activation with static codes deleting

WARNING: with this operation, it is possible to delete the static codes for all users and Manager. Furthermore, depending on the configuration selected, Master static code may be deleted as well.

Insert the red Dallas key N1971 in the reader. LCD displays:

DYNAMIC CODE
XXX

Enter the activation code generated by the software Dyama or DyamaWeb and press . LCD displays:

DELETE ALL THE
STATIC CODES?

Press . LCD displays:

OPERATION IN
PROGRESS...

Once completed, LCD displays:



DYNAMIC CODES
ACTIVE

To re-install the static codes (only for Master and Manager) use the dynamic user REMOVAL. Later, it is possible to re-install all the other users from the menu *Users management*.


Manager menu

Power up the keypad.

MANAGER MENU
X X

Press , then press . LCD displays:

Users Management

Power up the keypad. Enter Manager menu and press  until LCD displays:


USERS MANAGEMENT

Press  and press  to scroll users list or enter user ID.

02 03 04 05 06
✓ X _ _ ✓

“✓” user installed, “_” user deleted, “X” user disabled.

Override users 50 ÷ 59 can only be installed when the lock is open.

Press . If the user is not installed LCD displays:

02
INSTALL?

TechMaster

“E” Dallas key, “12” code, “+” dual mode, “TL” time lock

Press **OK** to confirm or **→** to exit or for switching to the next user.

Enter the new user code and confirm it.

If the selected user is already installed, press **→** to choose whether to disable it, to delete it or for leaving and selecting another user.

Press **OK** to confirm the choice.

Time delay

Power up the keypad. Enter Manager menu and press **→** until LCD displays:

T. DELAY AND
O. WINDOW

Press **OK** to confirm. LCD displays the current values for time delay and open window.

TIME DELAY 00
OPEN WINDOW 01

Press **→** to exit or **OK** to program new values.

TIME DELAY mm
OPEN WINDOW mm

Enter the new values and press **OK** to confirm. LCD displays:

VALUES UPDATED

Time delay can be programmed between 0 and 99 minutes, the open window can be programmed between 1 and 19 minutes instead.

To program a shorter time delay, lock must be open.

Variable Time Delay

WARNING: lock must always be open to set a variable time delay

Power up the keypad. Enter Manager menu and press **→** until LCD displays:

VARIABLE
TIME DELAY

Variable Time Delay – Adding new values

Enter Variable Time Delay menu and press **OK**. LCD displays:

ADD NEW VALUES

Press **OK**. LCD displays the current day of the week.

→ hh:mm VEN
← hh:mm ⌚ :mm

Enter values for starting time and ending time in which Variable Time Delay must be active and then enter the values of Variable Time Delay.



Press **OK** to confirm. LCD displays the next day of the week, proposing the same time values. Press **OK** to confirm or **→** to select another day without entering new time values or otherwise enter the new time values as previously illustrated.

At the end of the week, LCD displays:

END OF LIST
EXIT AND SAVE? ✓

User instructions


TechMaster


Press  to save the values or  for coming back to the first weekday.


After saving the values, LCD displays:

Press  to set new values (max. 4)



Variable Time Delay – Verify or delete values


Enter Variable Time Delay menu and press  until LCD displays:

Press . LCD displays the values for the first day.

Press  to scroll all the schedules list.


Press  on a schedule. LCD displays:


Press  to confirm the deletion or  to exit.


At the end of the list, press . LCD displays:

PC connection

Use this function to enable the connection between the keypad and PC.

Power up the keypad. Enter the Manager menu. Press  until LCD displays:




Press  to start the connection with PC.

Press  to stop the connection with PC.

If the static codes have been deleted, PC connection can be enabled by using the dynamic user AUDIT.

ADD NEW VALUES

VERIFY OR DELETE
VALUES

 08:00 DOM
 10:00  :01

DELETE VALUES?



END OF LIST EXIT
AND SAVE? 

PC LINK

PC LINK

...

Override Manager menu


Power up the keypad.

Press , then press  until LCD displays:

Enter OVR Manager code (default code 6-5-4-3-2-1).

Override Users management

WARNING: to install new override users, lock must be open.

Power up the keypad. Enter Override Manager menu and press  until LCD displays:

OVR MANAGER MENU
X X X X X


OVR USERS
MANAGEMENT

TechMaster


Press  and press  to scroll users list or enter user ID.


50 51 52 53 54
✓ x _ _ ✓

“✓” user installed, “_” user deleted, “X” user disabled.


Press . If the user is not installed LCD displays:

52
INSTALL?

 Dallas key, “1 2” code, “+” dual mode, “TL” time lock

Press  to confirm or  to exit or for switching to the next user.

Enter the new user code and confirm it.

If the selected user is already installed, press  to choose whether to disable it, to delete it, selecting another user or exit. Press  to confirm the choice.

Code changing


WARNING: it is recommended to always perform this operation with door open.

Power up the keypad.

CHANGE CODE

Press , then press  until LCD displays:

Change code for standard and override Users

Power up the keypad. Access Change Code menu and press . LCD displays:

CHANGE USER
CODE

Press  to confirm. LCD displays:

ENTER OLD CODE
X X - X X X X X

Enter the **old code** e insert the Dallas key (if programmed).



Enter the **new code** e insert the Dallas key (if programmed).

ENTER NEW CODE
X X X X X

Confirm the **new code** e insert the Dallas key (if programmed).

CONFIRM CODE
X X X X X

Change code for Manager

Power up the keypad. Access Change Code menu and press . Then, press  until LCD displays:

CHANGE MANAGER
CODE

Press  to confirm. LCD displays:

OLD CODE
X X X X X

Enter the **old code** e insert the Dallas key (if programmed).


Enter the **new code** e insert the Dallas key (if programmed).

ENTER NEW CODE
X X X X X

Confirm the **new code** e insert the Dallas key (if programmed).

CONFIRM CODE
X X X X X

Change code for Override Manager

Power up the keypad. Access Change Code menu and press **OK**. Then, press  until LCD displays:

CHANGE OVR
MANAGER CODE

Press **OK** to confirm. LCD displays:

OLD CODE
X X X X X

Enter the **old code** e insert the Dallas key (if programmed).


Enter the **new code** e insert the Dallas key (if programmed).

ENTER NEW CODE
X X X X X

Confirm the **new code** e insert the Dallas key (if programmed).

CONFIRM CODE
X X X X X

Change code for Master

Power up the keypad. Access Change Code menu and press **OK**. Then, press  until LCD displays:

CHANGE MASTER
CODE

Press **OK** to confirm. LCD displays:

OLD CODE
X X X X X

Enter the **old code**.

Enter the **new code**.

ENTER NEW CODE
X X X X X

Confirm the **new code**.

CONFIRM CODE
X X X X X

Time menu

Power up the keypad.

TIME MENU

Press **OK** and then press  until LCD displays:

Opening extension

WARNING: before using this function, at least one time lock must be programmed.

Power up the keypad. Access Time Menu and press **OK**. LCD displays:

MANAGER CODE
X X - X X X X X

Enter Manager code. LCD displays:


OPENING
EXTENSION

Press **OK**. If a time lock is already programmed, LCD displays the next activation time for the time lock (automatically calculated adding 30 minutes to the last activation time):


OPEN LOCK UNTIL:
12/09 20:30

TechMaster


Press  to confirm.


It is also possible to enter different values. Enter date and time (max. 2h) and press  to confirm.

Immediate Time Lock


Power up the keypad and access Time Menu and press .
LCD displays:

Enter Manager code. LCD displays:

Press  until LCD displays:

Press . LCD displays the next activation time for the time lock:

Press  to confirm.

It is also possible to enter different values. Enter date and time (max. 2 weeks) and press  to confirm.

MANAGER CODE
X X - X X X X X X

OPENING
EXTENSION

IMMEDIATE
TIME LOCK

BLOCK UNTIL:
14/09 08:00

Configuration menu

Power up the keypad.

Press  and then press  until LCD displays:

Enter configuration code (default code 50-50-50).

Install Locks

Power up the keypad. Access Configuration Menu. LCD displays:

Press  and select the lock to install.

If the lock selected is already installed, LCD displays:

If the lock selected is not connected with the keypad, LCD displays:

If the lock selected is instead connected with the keypad (but not installed), LCD displays:

Enter Master code and then Manager code. LCD displays:

CONFIGURATIO
N
X X X X X X

INSTALL
LOCKS

SELECT
LOCK

LOCK ALREADY
INSTALLED

LOCK X
DOES NOT
ANSWER

MASTER CODE
X X X X X X X X

OPERATION
DONE

Remove Locks

WARNING: it is recommended to perform this operation always with lock open and connected with the keypad.

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL
LOCKS

Press  until LCD displays:

REMOVE
LOCKS

Press  and select the lock to remove.

SELECT
LOCK

If the lock selected is connected with the keypad, LCD displays:

REMOVE LOCK
X?

Press  to confirm. LCD displays:

MASTER CODE
X X X X X X X X

Enter Master code, LCD displays:

OPERATION
DONE

If the lock selected is not installed, LCD displays:

LOCK NOT
INSTALLED

If the lock selected is not connected with the keypad, LCD displays:

LOCK X
DOES NOT
ANSWER

Later, LCD displays:

CONTINUE?

Press  to confirm. LCD displays:


OPERATION
DONE

Lock reclosure mode

WARNING: this option is only available for motorized locks. To enable it, lock must be open.

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL
LOCKS

Press  until the LCD displays:


LOCK
RECLOSURE
MODE

Press . LCD displays:

MODE:
AUTOMATIC

Press  to select between *AUTOMATIC* and *MANUAL* mode.

Press  to confirm.

With *MANUAL*, lock can be closed by pressing and holding  for 2 seconds.

With *AUTOMATIC* instead, lock automatically re-closes after the time set with Setup software.

TechMaster

Install I/O interface

WARNING: I/O interface must be in pre-setup mode before the installation. For further information regarding the I/O interface reset see the user manual II_T9355_IP_XX_eng. Furthermore, the lock with ID: 1 must be open.

Power up the keypad. Access Configuration Menu. LCD displays: INSTALL
LOCKS

Press  until the LCD displays: INSTALL
I/O INTERF.

Press . LCD displays: MASTER CODE
X X X X X X X


Enter Master code. LCD displays: OPERATION
DONE

Configure I/O Interface


Power up the keypad. Access Configuration Menu. LCD displays: INSTALL
LOCKS

Press  until the LCD displays: CONFIGURE I/O
INTERFACE

Press . LCD displays: RS485 ID 01

Press  to confirm. LCD displays: MASTER CODE
X X X X X X X

Enter Master code. LCD displays: RS485 ID XX

Enter an ID RS485 and press  to confirm. LCD displays: OPERATION DONE

Remove I/O Interface

Power up the keypad. Access Configuration Menu. LCD displays: INSTALL
LOCKS

Press  until the LCD displays: REMOVE I/O
INTERFACE

Press  to confirm. LCD displays: MASTER CODE
X X X X X X X

Enter Master code. LCD displays: OPERATION DONE


If Dynamic codes have been activated, along with the deletion of all static codes (including the Master code), it is possible to directly access the menus I/O interface configuration and I/O interface removal by entering a dynamic code for the user I/O CONFIGURATION USER.

For further information, see the paragraph **Dynamic codes activation with static codes deleting**, page 18.

Display contrast

Power up the keypad. Access Configuration Menu. LCD displays:


INSTALL
LOCKS

Press  until the LCD displays:


DISPLAY
CONTRAST

Press . LCD displays:

ADJUST
CONTRAST
X

Enter a contrast level (between 1 and 9) and press  to confirm.
LCD displays:

OPERATION DONE


If Dynamic codes have been activated, along with the deletion of all static codes (including the Master code), it is possible to access the Display contrast menu by pressing and holding .

For further information, see the paragraph **Dynamic codes activation with static codes deleting**, page 18.

Temporary restoring of the display contrast

This option can only be accessed after activating the dynamic codes without deletion of the static codes.


Power up the LCD. Press and hold  until the LCD displays the keypad firmware version.

Keep pressed  for 3s: LCD contrast level is automatically set to "3" regardless the last contrast value set and it remains at "3" until the LCD is kept ON.


Keypad Language

Power up the keypad. Access Configuration Menu. LCD displays:



INSTALL
LOCKS

Press  until the LCD displays:

LANGUAGE

Press . LCD displays the current language set up:


LANGUAGE
ENGLISH

Press  to change the language and press  to confirm.

Membrane test

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL
LOCKS



Press  until the LCD displays:

MEMBRANE TEST

TechMaster

Press . LCD displays:

MEMBRANE TEST
1234567890 → ✓



Press  to change the language and press  to confirm.

Enter the sequence of buttons shown on the LCD.

Any working button produces a short beep.

A damaged button produces a long beep and LCD displays:

WRONG/FAULTY
KEY

Press  to change the language and press  to confirm.


Two short beeps are produced if the test is completed successfully.
LCD displays:

OPERATION
DONE



System Info


Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL
LOCKS

Press  until the LCD displays:

SYSTEM INFO


Press . LCD displays keypad system information. Press  to see lock system info.

Press  to see the current time and date.


Dynamic keypad ID and DyamaWeb software license

These options can only be used after activating the dynamic codes. For further information see the paragraph **Dynamic codes activation with static codes deleting**, page 18. If dynamic codes have been activated, along with the deletion of all the static codes (including the Master code):

Power up the LCD. Press and hold  until LCD displays the keypad firmware version.


Press  once: LCD displays the ID of the keypad in which dynamic codes have been activated.

OTC ID
XXXXXXXX

Press  a second time: LCD displays the license number of DyamaWeb software version that manages the dynamic codes of the keypad and related locks.

DYAMAWEB
XXXXXX

Press  to exit.

If Dynamic codes have been activated without deletion of the static codes, it is possible to retrieve the information by accessing the Configuration menu, selecting System info option and pressing .

Press  to exit.

Correct disposal of this product:

(Waste Electrical & Electronic Equipment)

Applicable in the European Union and other European countries with separate collection systems.



This marking displayed on the product or its literature indicates that it should not be disposed with other wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Contacts

GLOBAL HEADQUARTERS

Tecnosicurezza SpA

Via Cesare Battisti, 276
37057 San Giovanni Lupatoto
Verona

Tel.+39 045 826 64 70

Fax. +39 045 826 64 69

info@tecnosicurezza.it

USA HEADQUARTERS

Tecnosicurezza Inc.

50, Thomas Lane
Versailles, KY 40383

Tel.+1 859 490 89 30

info@usatecno.com

SPAIN HEADQUARTERS

Tecnosicurezza Sa

C/Menor, 4 - Nave 10
Pol. Ind La Mina 28770
Colmenar Viejo

Tel.+34 91 804 33 91

Fax.+34 91 804 32 63

info@tecnosicurezza.es